

LED Sign with Scrolling Display

Remote Control Buttons

{SET} Hit set to enter the setup mode.

{C} Delete all.

{Exit} Exit setup mode.

{<} Move cursor left.

{>} Move cursor right.

{A/a} Enter alphabetic characters.

{0-9} Enter numeric characters.

{?-#} Enter symbols.

{_} Enter space.


{<--|} Confirm entry.

{<--} Backspace.

Circular {A/a} on bottom left = change case from capital to lower case or lower case to capital.

{M/S} Change speed of scroll.

{Save} Save and exit.

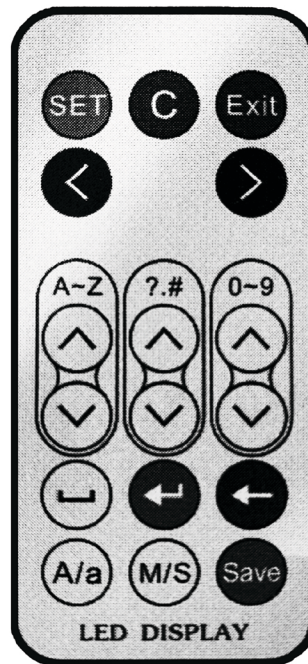

Operational Guide

1. Plug in.

2. Point remote control toward the LED display. Push the "set" button on the top left of the remote.

3. Once in setup mode, push the arrow keys to move the cursor to the place you want or hold "C" to clear out any previous message.

4. Use the alphabet, symbol, and numeral keys to enter your desired message.

5. Use the "enter" button to save a character, use the "backspace" button to delete a character.

6. Once your entire message is entered, hit the "save" button.

7. After your message is entered, you may change the scroll speed by hitting the "M/S" button. There are 5 levels of speed.

8. There are also 4 different fonts, you can change fonts by using the "A/a" button in the bottom left hand corner of the remote.